

Johnson Health Tech., Co., Ltd. www.johnsonfitness.com

足部按摩器 Leg & Foot massager RT1889 使用手冊 USER MANUAL 感謝您購買本產品。使用前,請仔細閱讀本使用手冊,並請特別 注意安全事項,以確保正確操作以及使用。

請妥善保管本使用手冊,以便日後查詢。

目 錄

安全注意事項	1
機件名稱與功能	3
產品結構	. 3
控制面板	4
控制面板按鍵功能說明	5
使用方法	6
使用前準備	6
使用方法	6
使用後	6
產品的保養和保管	7
保養方法······	7
温馨提示	7
常見問題與處理方法	8
產品規格	9
產品保固卡	10

TECHNICAL SPECIFCATIONS

Product Name: leg & foot massager

Model No: RT1889

Rated Voltage: 220-240V~ Rated frequency: 50/60Hz

Rated power: 60W Safety design:

本產品有害物質名稱及含量標識如下表

The name and content of hazardous substances in this product are as follows

		名稱 ent name			型號(型式) Type designation(Type)		RT1889
限用物質及 Restricted substances it			t化學 s chemi	符號 cal symbols			
單元 Unit	鉛 Lead (Pb)	汞 Mercury (Hg)	鎘 Cadmium (Cd)	六個 Hexav chron (Cr-	alent nium	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
外殼 Outer cover	0	0	0)	0	0
電路板組件 Circuit board set	0	0	0)	0	0
金屬件 Metal parts	0	0	0)	_	ı
橡膠件 Rubber part	0	0	0)	0	0
電源線/適配器 Power line/adapter	0	0	0)	0	0
內部信號連接線 Internal signal cables	0	0	0	C)	0	0
皮革Leather	0	0	0)	0	0

備考1. "超出0.1 wt %" 及 "超出0.01 wt %" 係指限用物質之百分比含量超出百分比含量基準值。 Notel: "Exceeding 0.1 wt %" and "Exceeding 0.01 wt %" indicate that the percentage content

Notel: "Exceeding 0.1 wt%" and "Exceeding 0.01 wt%" indicate that the percentage content of the restricted substances exceeds the reference percentage value of presence condition.

備考2. "○" 係指該項限用物質之百分比含量未超出百分比含量基準值。

Note2: "O" indicates that the percentage content of the restricted substances does not exceeds the percentage of reference value of presence.

備考3. "-" 係指該項限用物質為排除項目

Note3: The "-" indicates that the restricted substances corresponds to the exemption.

環保使用期限說明

此電子電器產品在說明書所述的使用條件下使用本產品,含有的有害物質或元素不致發生外泄,不致對環境造成污染或對人身、財產造成嚴重損害的期限為10年。

Statement of environmental protection use period

Use this product under the described condition of user manual, the period that will not leak harmful substances or elements, not to cause environment pollution or personal and property damage is 10years.



20)

■ TROUBLE SHOOTING

NO.	Symptom	Possible Cause	Solution
1.	There is a clattering noise in the movement.	This is perfectly normal caused by the working of product.	It is normal and no need for treatment.
	The Foot Massag-	The power plug is loosened.	Insert the plug into socket firmly.
2.	er can not be started up.	The power switch is not turned on.	Turn on the power switch.
3.	Stop during use	Defaultworking time is up.	Reuse in 15 minutes later

If ther are some unusual symptoms after having checked the above items, please contact your local dealer to ask for an authorized service engineer.

安全注意事項

安全注意事項

- ▶使用前,請仔細閱讀本"安全注意事項",並正確使用。
- ▶ 在此標明的注意事項,有助於您安全正確地使用本產品。
- ▶ 為明確表明危害和損害的大小程度・注意事項將表示錯誤使用可能產生的損害 區分為"警告"、"注意"。兩者均為安全有關的重要內容,請務必遵守。

警告	表示錯誤使用・使用者可能會蒙受傷害・
注意	表示錯誤使用,使用者可能蒙受傷害或者產品損害。

®	○ 符號·表示禁止的行為。 圖中所示為指示的內容(例:左圖為禁止拆卸)
•	● 符號·表示強制、指令的內容。圖中所示為指示的內容(例:左圖為拔掉電源插頭)



以下人員,請務必諮詢醫生後使用。





- 3.惡性腫瘤患者、心臟病患者、高血壓患者、患有急性疾病者。
- 4.皮膚有創傷者。
- 5.孕婦或正處於經期者。
- 6. 骨質疏鬆症、脊椎或骨折患者。
- 7.體溫38度以上(發燒)的人。



強制

請勿讓操作遲緩或幼兒單獨使用(有人看管情況下可使用)。

請勿讓兒童做為玩耍和使用。

本產品僅限一人使用,請勿兩人或兩人以上同時使用。

如果電源線損壊・應停止使用。

請勿損傷、損壞、過分彎曲、拉扯、扭轉、打結控制器電源線。



除了本公司的維修技術人員之外,絕對不得對產品進行分解、 維修和改裝。如有問題請及時與本公司客服人員聯絡。

安全注意事項



每次使用時間以15分鐘為宜。

請勿在產品上放置重物。

請將產品放置在平坦的地面上。

使用時,請勿在其上覆蓋毛毯或枕頭,以免因過熱而導致使用者不 滴, 甚至引起故障。

請勿用濕手操作控制面板。

請勿將產品放置於戶外。

清潔產品時,絕對不可以將整個產品放到水中或其他溶液中。

請使用產品配套的內置式電源供應器。

如需更換請聯絡本公司客服人員。



強制

若是將本產品由低溫處移至較暖處使用時,往往會發生內部零件因為 水氣的聚集而影響到本產品正常運作,甚至造成機件故障。建議取出 後,在正常室溫下放置一小時後再使用。

產品加熱,對熱不敏感的人使用時必須注意。

請勿在使用本機的同時使用其他治療儀器。

請勿用於治療目的。

如果停電請關閉開關,切斷電源,以避免來電時造成產品故障。

使用中若有感覺產品機件故障或不正常狀況,請立即停止使用。

切勿使用額定電壓以外的電源。

電源線破損時,請勿私自拆卸更換,應聯絡本公司客服人員來更換。

切勿在潮濕的環境下使用,以免產品受潮造成漏電問題。

在使用過程中,身體出現或感到異常時,請立即停止使用,並諮詢醫生。

使用後請將電源插頭從電源插座上拔下。

請勿飯後立即使用,以免造成不適。



請勿在產品使用時,在產品上入睡。

請勿在酒醉或身體不適時使用本產品。

請勿雷擊時使用。

請勿用汽油、去漬油等進行擦拭。

請勿將本產品放於火源附近,以免產品布套因高溫而損壞。

CLEANING AND MAINTENANCE

Maintenance

- 1. Cleanina
- ▶ Before cleaning, make sure the power supply is turned off and the plug has been pulled out from the socket.
- ▶ Use a soft cloth to wipe the surface of the product and controller.
- ▶ Use a piece of cloth that has been dipped with cleaning agents to wipe the main unit of massage chair, and then use a piece of dry and soft cloth to wipe it.

A Caution

- ▶ Do not pull the power plug by damp hands.
- ▶ Do not use water washing product, do not spray the water or other liquids to the interior of the product.
- ▶ Do not use corrosive cleaning agents like benzene or thinner to clean the massage chair, otherwise, the color of upholstery will fade or the massage chair will crack or be eroded.
- ▶ Do not iron the upholstery.
- ▶ When product is wet, do not detach the cloth cover, let the product dry naturally.
 - 2. Maintenance
- ▶ Make sure the power supply is turned off and the plug has been pulled out from
- ▶ Sweep off the dust. Keep the massage chair clean and away from damp places.
- ▶ If the massage chair is not to be used for a long period of time, please cover the massage chair with a dustproof cover(selfprovided).



A Caution

▶ Do not store the product under direct sunlight or in places with high temperature. This may cause the color of the upholstery to fade.

Kindly reminding

Please check if there is any below symptoms when the product is in dailyuse:

- ▶ The burned and scorched flavor.
- ▶ Touch the wire, sometimes power is on, sometimes power is off.
- ▶ The power cord heats.
- Other abnormalities.




Caution

- ▶ If any of the above mentioned abnormalities exist, please stop use to avoid accident happens.
- ▶ Turn off the power supply and pull the plug out, contact the Caution local dealer or contact us.
- ▶ Do not disassemble the product and repair.

USE METHOD

Preparation before use

- ▶ Please put the product on the flat floor.
- ▶ Please keep this product one meter away from audio-visual equipment such as TV set, radio, etc to prevent any signal interference.
- ▶ Please plug to rated power supply(100-240~).
- ▶ Turn on the power switch.

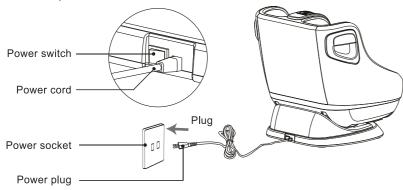



- ▶ Before plug, please check and make sure the power cord is undamaged.
- ► Do not use the wet hand to pull out the power cord in order to avoid any electric shock.
- ▶ Please choose a chair with desired height and be seated, then put your feet into the product (see right picture).
- ▶ Please turn on the power button "(b)", start the auto massage program.
- ▶ During using, if want to adjust the angle of the product, please press the "angle adjustment button" (inside the right handle). Press this button up can adjust the angle the products. Three grades, max angle 22 degrees. (please see the picture on page 3)




After use


- ▶ Turn off the power button on the control panel.
- ▶ Remove the plug from the power supply socket.

村

機件名稱與功能


產品結構

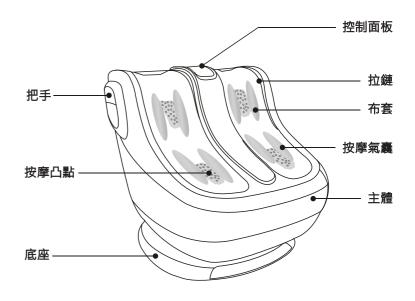

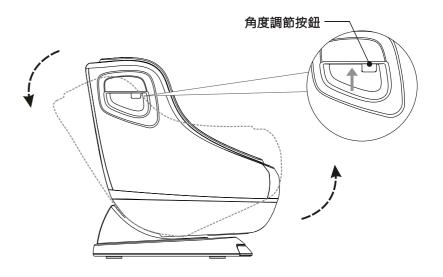

機件名稱與功能

控制面板

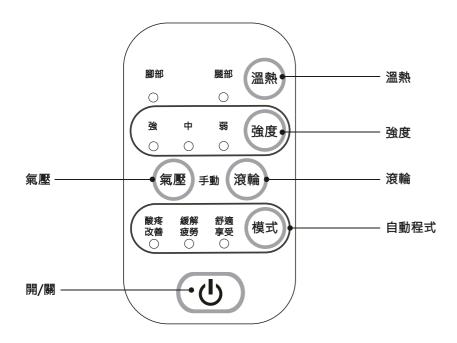



注意

- ▶請勿將水或其他液體濺到控制面板上。
- ▶ 請勿過度用力按住按鍵不放,以免影響運作。
- ▶請勿站立在產品上使用或產品上放置重物,以免產品發生故障。
- ▶ 在仟何情況下,請勿站立或坐在產品上。
- ▶ 移動產品時,請勿直接拉扯電源線或拖拉本產品,以免造成損害。

NAME AND FUNCTION OF EACH PART

Functions of control panel



Heat button

Press this button, cycle through to turn on the heat function for the calf, sole and turn off the heat function for the calf and sole.(Default setting:turn on the heat function for the calf and sole)



Intensity button

Press this button, adjust the intensity of scrape and air pressure. Press this button, cycle through to choose the strong, middle, weak grade. (The corresponding indicator will be lightened or extinguished).



Air pressure button

The air pressure is a manual mode, can turn on or turn off the air pressure massage. Press this button, start the air pressure massage function, no scrape. Indicator light flashes slow, the intensity of air pressure massage become slow. Indicator flashes fast, the intensity of air pressure massage become fast.



Scrape button

Scrape button is a manual mode. Can turn on or turn off this function. Press this button is scrape function, no air pressure massage function. Indicator light flashes slowly, the intensity of scrape become slowly. Indicator light flashes fast, the intensity of scrape become fast. (Default setting:turn on this function)



Auto mode button

Press this button, cycle through to select three modes, reduce pain relieve fatigue, comfortable enjoyment .(Default setting:turn on the comfortable enjoyment)



ON/OFF

After connecting the power, press this button to start the massage function of product. The corresponding indicator will be lightened. Press this button again, turn off the massage function of the product, the corresponding indicator will be extinguished, (Default setting time: 15 minutes)




Caution

- ▶ When power failure happens during massage, please turn off the power and pull out of the plug from output socket.
- Please do not let your hand or fingers close to and inserted into the gap of products for preventing any injuries caused.
- Please do not let children and pets play the products for preventing any accident happened.

NAME AND FUNCTION OF EACH PART

Control Panel

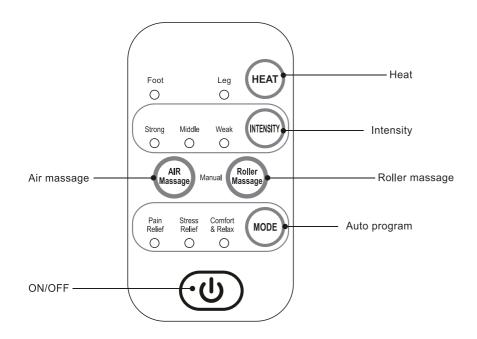

Caution

- ▶ Please don't put water or other liquid on the control panel.
- ▶ Please don't press the button too long time at a time to avoid the program confused.
- Please don't use the product by standing posture or put any heavy object on the product to avoid any broken caused.
- Please don't stand or seat on the product.
- When moving the product, please don't pull the power cord or drag the product diretly to avoid any damaged caused.

機件名稱與功能

控制面板按鍵功能說明



溫熱鍵:

按下此鍵可循環選擇開啟腿部、腳底、腳底和腿部及關閉溫熱 功能。(預設為腿部、腳部全開)

強度

強度鍵:

按下此鍵,可調節滾輪和氣壓強度;按此鍵可循環選擇高、中、 底力度,相對應的指示燈被點亮或熄滅。(預設為中力度)



氣壓鍵:

氣壓在手動位置,可開啟或關閉氣壓功能;按下此鍵機器只有 氣壓,無刮痧。指示燈慢閃氣壓動作也隨之緩慢,反之指示燈 快閃,氣壓動作也隨之加快。(開機預設開啟)



滾輪在手動位置,可開啟或關閉滾輪功能;按下此鍵機器只有 滾輪,無氣壓。指示燈慢閃滾輪動作也隨之緩慢,反之指示燈 快閃·滾輪動作也隨之加快。(開機預設開啟)

模式

自動程式鍵:

按下此鍵可循環選擇三種自動程式;分別為"舒適享受 "、 緩解疲勞 "、"酸痛改善"。(開機預設"舒適享受")



電源開關鍵:

在接通電源情況下;按此鍵開啟整機按摩功能,相對應的指 示燈被點亮,再按下此鍵,關閉整機功能,相對應的指示燈 熄滅。(產品預先設定時間為15分鐘)

1 注意


- ▶ 使用過程中,若發生電源故障,請關閉電源開關並拔掉電源插頭。
- ▶請勿將手或手指靠近及插入縫隙,以免受傷。
- ▶請勿讓兒童及寵物在此玩耍,以免發生意外。
- ▶ 請勿將產品空載使用,以免磨損布套。

使用方法

使用前準備

- ▶ 請將產品水平放置。
- ▶ 電源線插頭插入110V~的電源插座上。



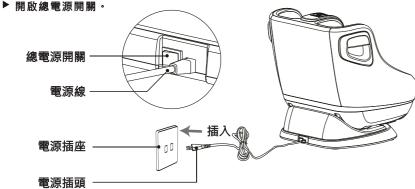



- ▶ 插入插座前,請確認外露電線無破損。
- ▶請勿用濕手拔插電源插頭。

使用方法

- ▶ 選擇高度適合的椅子坐下,將您的雙腳伸入 產品內。(右圖)
- ▶ 開啟控制面板上的開關 " (U) " 鍵 · 進入 自動按摩程式狀態。
- ▶ 使用過程中如果需要調節機器角度,可按產 品右邊把手內側的"角度調節按鈕",用手 指將此按鈕向上壓,可調節按摩器角度。— 共三個角度,最大角度22度。 (見第3頁圖示)





使用後

- ▶ 關閉控制面板上的電源開關。
- ▶ 不使用時,請從插座上拔下電源插頭。

NAME AND FUNCTION OF EACH PART

External structure

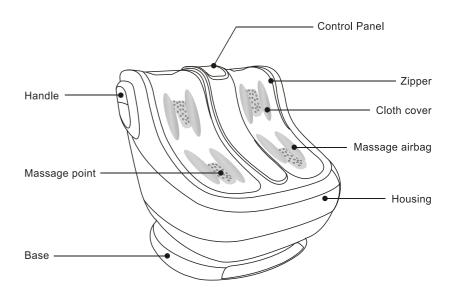

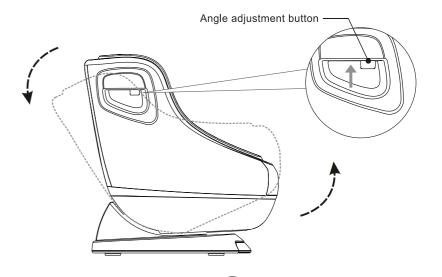

SAFETY PRECAUTIONS



A CAUTION

Do not continuously use this product over 15 minutes.

Do not put heavy objects on the product.

The default working time of the product is 15 minutes.

Please do not cover the product with blanket or pillow when it is used, thus to avoid user from being burn or causing fire disaster.

Please do not stand on the product to avoid any failure.

Do not operate the controller with wet hands.

Do not put the product outdoors.

It is forbidden to dip the whole product in water or other liquid when



If the product is moved from a low temperature place to a warmer place, it is advised to use it one hour later to avoid function failure caused from vapor condensing.

Do not use this product together with other therapeutic equipments.

People who are insensitive to heat must be accompanied by normal person when using this product.

Do not use this product for medical treatment.

Please stop using this product immediately when you find any abnormal situations (such as smoke or peculiar smell) during use.

Please use the power supply with rated voltage only.

Please check the product before using, if damage found, please contact the dealer for repairing immediately.

Do not use this product in damp environment to avoid electric shock.

During use, if you feel abnormal, please stop using this product immediately, and then consult your doctor.

After use, please cut off power supply.

Do not use the product within half an hour after meal.

Do not sleep during the product working.



Do not use the product after drunk or any abnormality of your body.

Do not wear watch, bangle and not put cell phone, keys and other valuables in your jacket when use the product.

Do not use petrol, caustic agents and spay pesticide for cleaning.

Do not put the product near combustible.

Do not smoke when using the product to avoid fire occurrence.

產品的保養和保管

保養方法

清潔

- ▶ 清潔之前,請確認電源開關已經關閉,電源插頭已經從插座上拔出。
- ▶ 產品的表面請用柔軟的布進行擦拭清潔。
- ▶ 髒污的地方請用柔軟的布沾水或中性溶劑進行清潔後,再用乾布擦拭。



- ▶ 切勿濕手拔插電源插頭。
- ▶ 切勿用水沖洗產品,或讓水或其他液體進到產品內部。
- ▶ 切勿使用具有腐蝕性的清潔劑來清潔產品,否則可能會造成產品褪色。 產品結構受到腐蝕、裂開等現象。

保養

- ▶確認電源開關關閉,電源插頭已經從插座上拔出。
- ▶請保持產品清潔並遠離高濕度或高溫的場所,以及有揮發性氣體的環境。
- ▶ 如果長時間不使用產品,請放入包裝盒,防止落入灰塵。



注意

▶ 切勿將產品放置於陽光直接照射或高溫的場所,以免造成產品褪色。

溫馨提示

經常使用時,請務必檢查是否有以下狀況:

- ▶有燒焦氣味。
- ▶啟動電源線後有時通電,有時斷電。
- ■電源線發熱。
- ▶拆洗腳套時,請勿用力拉扯拉鏈,以免造成損壞。請用中性清潔劑清洗布套。
- ▶其他異常。



- ▶ 如有上述現象,為防止故障和事故的發生,請停止使用產品。
- ▶ 切斷電源開關,拔下電源插頭,並與您購買本產品的經銷商或 本公司聯絡。
- ▶ 切勿私自拆卸修理。

常見問題與處理方法

序號	現象	可能原因	處理方法
1	動作中出現"咻咻""嗒嗒"的聲音。	產品正常工作時發出聲 音或內部機件與布套之 間的摩擦的聲音	無需任何處理
2	產品不動作	電源插頭脫落	2.1插上電源插頭
2	生 叩 小 到 1 F	電源開關未開啟	2.2打開電源開關
3	使用過程中停止	預設使用時間結束	間隔15分鐘後再次 使用

如果進行了上述處理還有異常現象,請與我們的客服中心聯絡,要求維修檢測。

喬山台灣客服中心專線:0800-017360

喬山台灣官網:http://www.johnsonfitness.com.tw

SAFETY PRECAUTIONS

Safety Precautions

- ▶ Before using, please read this "SAFETY PRECAUTIONS" carefully to ensure proper operation.
- ▶ The following "SAFETY PRECAUTIONS" is of great help to your correctly use of this product.
- ▶ To clearly indicate the degrees of danger and damage, the classes of accidents caused by incorrect use are classified into "WARNING" and "CAUTION", instructions marked as followings should be strictly followed.

	WARNING	Improper operation may cause injury to users.
CAUTION		Improper operation may cause users injury or product damage.
Forbidden. Specific instruction will be indicated in the diagram drawings. (e.g, the left drawings means disassembly is not allowed.)		
Compulsory Specific instruction will be indicated in the diagram drawings. (e.g, the left drawings means to diconnect the power plug.)		



A WARNING

WA	KNING			
	We recommend that those with any of the following conditions consult a doctor before using.			
	 Those who are using electronic medical instrument imbedded in 	 Women who are pregnant or menstruating. 		
COMPULSARY	the body, such as cardiac pacemaker etc. 2. Those who are being treated by	Those with osteoporosis or fracture spine.		
	doctors, especially those who feel uncomfortable.	Those with skin disease or those whose skins are injured.		
	 Those who are malignant tumor patients, heart disease patients, acute patients. 	 Those whose body tempera- ture is over 38 degrees(Febrile Phase) 		
	Supervision is compulsory when the product is used by intellectual disabilities children.			
	Do not allow children play with product.			
	Do not more than one person to use this product at a time.			
PROHIBITED	Do not damage, process, excessively bend, pull hard, twist or knot power cord.			
	Do not use the product when the power cord is damaged.			
	Do not allow the minors to use the product.			
NO DISASSEMBLY	Anyone else, except maintenance personnel specified by our company, should not disassemble, maintain, or remodel this product. If any problem, please contact local dealer immediately.			

Thank you for purchasing Johnson RT 1889 Leg & Foot massager. Please read the operation manual thoroughly for the correct methods of usage and take special notice of the safety section before you start. This manual should be kept on hand for easy reference on safe and efficient operation of the Massager.

CONTENTS

SAFETY PRECAUTIONS	12
NAME AND FUNCTION OF EACH PART	14
External Structure	- 14
Control Panel	- 15
Functions of Control Panel	16
USE METHOD	17
Preparation before Use	- 17
Operation Method	. 17
After Use	17
CLEANING AND MAINTENANCE	18
Maintenance	- 18
TROUBLE SHOOTING	19
TECHNICAL SPECIFICATIONS	20

產品規格

產品名稱:足部按摩器

產品型號:Johnson RT1889

額定電壓:110V AC

額定頻率:60Hz 額定功率:65W

安全設計: □ 😝 R53481

體 積:約(長)49.3X(寬)48.5X(高)51.5公分

重 量:約12公斤

材料:聚氯乙烯(PVC)、塑膠(ABS)、布料

說明

- 本公司保留對產品及說明書修改的權利,如有異動恕不另行通知,產品外觀以實物為準
- 本冊内容上的說明,本公司保留解釋權。
- ❖ 廢棄物不當處置會造成對環境的污染

-((

JOHNSON®產品保固卡

【請妥善保管,遺失或損毀均不再補發】

購買日期:	
機器型號:	
條 形 碼:	
經銷商蓋章:	

注意事項

- *本保證卡未加蓋公司章或內容填寫不完整、遺失、篡改或字跡無法辨識, 視同失去保證效力(如提出原始發票或經銷文件足以證明購買日期者,不 在此限)。
- * 維修時請出示本保證卡。
- * 保證期限內,請聯絡本公司授權之維修據點檢修。
- * 保證卡僅此一份,請妥善保存。
- * 保固區域以台灣(不含外島及國外)地區為準。

保證期間內因下列情況發生將收取相對費用

- * 產品因用戶不當使用、保管與維護之故障。
- * 產品非經本公司授權之維修人員檢修、自行拆卸、改裝造成之故障。
- * 產品遭受雷電火災、地震等自然災害及公害等其他外部因素所造成之損害。
- * 不能提供保證卡或保證卡上所填寫之機器型號、序號與待修產品之型號、 序號不同。
- * 產品外觀因使用造成污舊者。
- * 如經公司服務人員判定非屬於商品故障所做的服務,公司得收取基本工時 及寄送等費用。
- * 使用於營業地點或公共場所(非家用)之商品。

保證期限

* 本產品自購買日起,保固一年,由於製造上之原因所發生之故障,可免費 維修,周邊配件及耗材除外。